
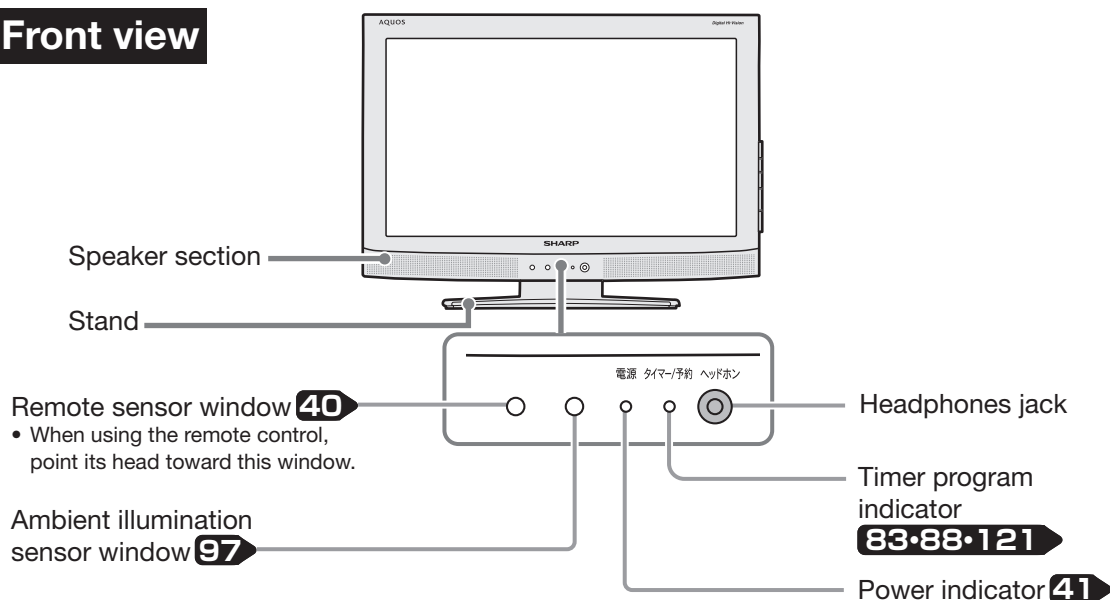


# Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


## Front view




### Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

## Left Side view


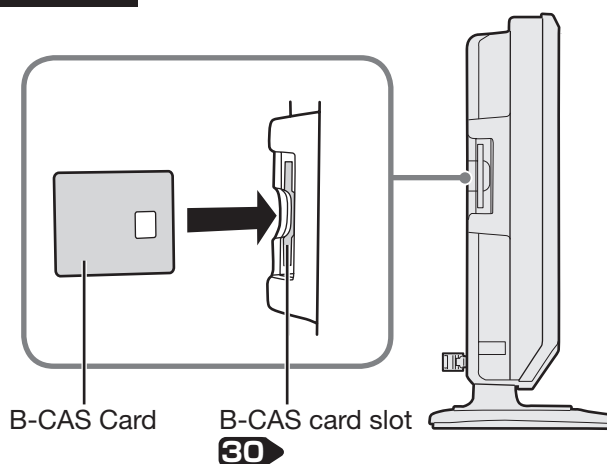


## Back view

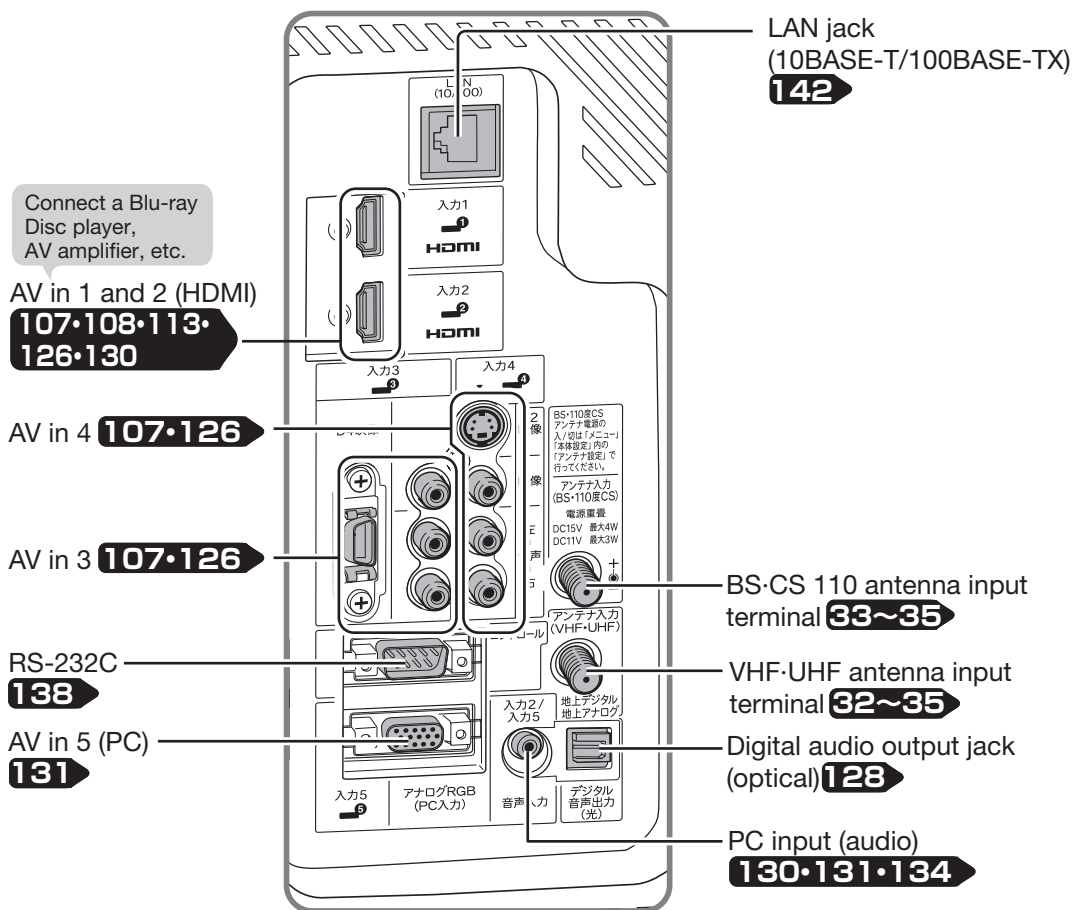


## Control panel

### Right side view

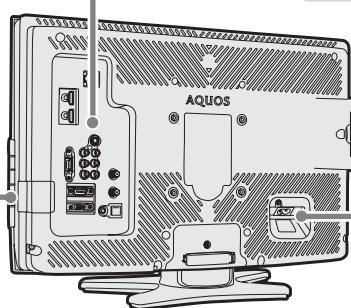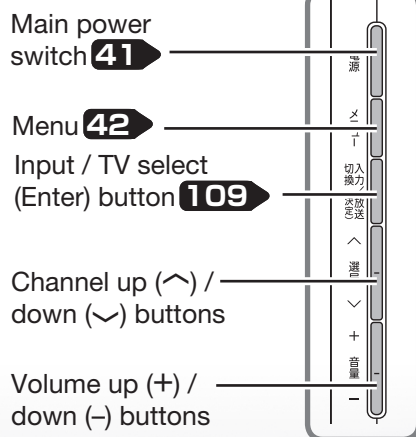

Connect the AC cord

AC cord connector (AC 100V) **38**

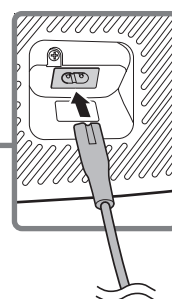

はじめに

準備

番組を見る

録画と再生

ファミリンク  
で録画・再生

ゲームオーディオ  
パソコンをつなぐ

その他の機能

故障かな仕様・  
寸法図など

English  
Guide

# Part Names - Remote Control Unit

## Active/Standby..... 41

Press to engage the TV set in the active or standby mode.

## CATV..... 73

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

## 地上D Terrestrial digital select 68

## BS BS select..... 68

## CS CS select..... 68

## 地上A Terrestrial analog select 68

Select the CS digital channel for the first time. 47

## 消音 Mute..... 69

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## + 音量 Volume up (+)/down (-) 69

Press to adjust the volume.

## Linked data broadcast..... 86

Press to call the data broadcast linked with the current digital TV program.

## AV mode select..... 95

Press to select the picture/sound setting that best matches the current program.

## 番組表 EPG..... 76

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## 裏番組 Other on-air programs... 77

Press to display the EPG for currently on-air programs only (裏番組).

## 番組情報 Program info..... 87

Press to display detailed information on the current digital program.

## Finish..... 42

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## 映像切換 Picture select..... 85

Press to select the desired picture when watching a digital multi-picture program.

## 字幕 Caption..... 85

Press to display, select, or turn off captions when watching a digital program with captions.

## 音声切換 Audio select..... 84 • 85

Press to select the desired audio.

## Familink..... 114 • 120~123

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## 画面表示 Display 70

Press to display or turn off the channel call, etc.

## 画面サイズ Screen mode ..... 93

Press to select the desired screen mode.

## 3桁入力 Digital channel number input 72

Use to select a digital channel by entering the 3-digit channel number.

## 静止 Freeze..... 86

Press to freeze the picture.

## お好み選局 Favorite channel select/register..... 73

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

## Channel select ..... 69

- Press to select a channel.
- Use to input a number for various settings.

## ↑ 選局 Channel up (^)/down (v) 69

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

\* CATV channels are factory set to be skipped.

## 入力切換 Input select ..... 109

Press to select the desired input.

## Familink..... 114 • 120~123

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## Sleep timer..... 146

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

## Menu..... 42

Press to display or turn off the menu screen.

The menus can be displayed in English. See 179 for instructions on how to switch the display language.

## Cursor (up, down, left, right)..... 42

Use to select a menu item, column, etc.

## 決定 Enter/Confirm..... 42

Press to confirm a selected setting or menu item.

## Return..... 42

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

## 青 赤 緑 黄 Color 78~79 • 86

Use to operate EPGs and data program screens.

## テレビ/データ Media select..... 68

Press to select the desired media (TV or data).

## To open the cover


Hold the cover by the projections on both sides and lift upwards.



# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

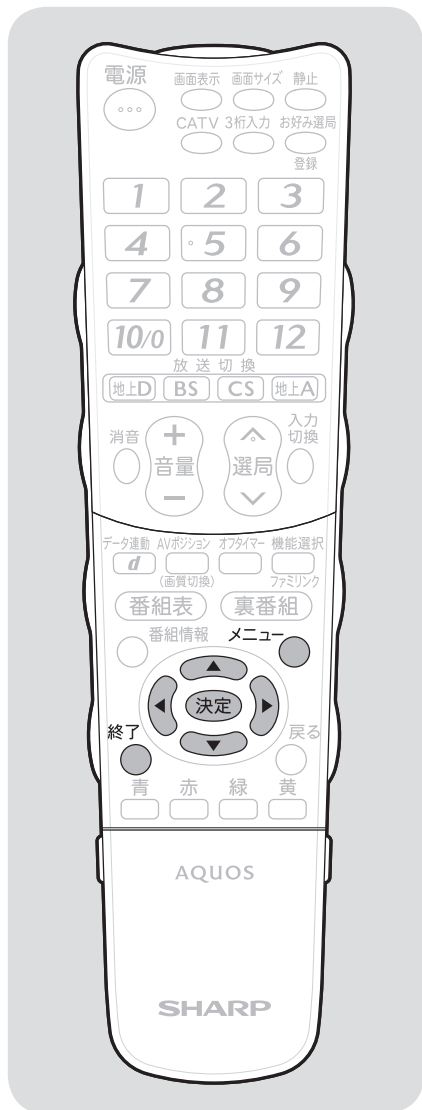

## おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

## 1

Display the menu screen.  
メニューを表示する


Press  
メニュー

## 2

Select “本体設定” (Setup) –  
“Language (言語設定)” .  
「本体設定」－「Language (言語設定)」  
を選ぶ  
Enter.  
決定する

Select with  
決定

Press  
決定

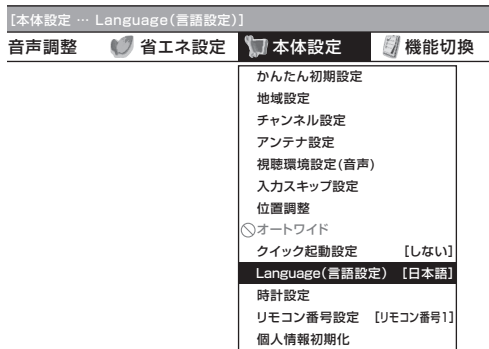


## 3

Select “English” .  
「English」を選ぶ  
Enter.  
決定する

Select with  
決定

Press  
決定

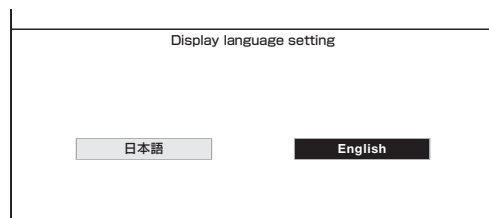

- The menu screen is now displayed in English.
- 画面表示が英語になります。

## 4

Finish this operation.  
終了する

Press  
終了

はじめに

準備

番組を見る

録画と再生

ファミリーリンク  
で録画・再生

ゲーム・オーディオ  
パソコンをつなぐ

その他の機能

故障かな！仕様・  
寸法図など

English  
Guide